



HIFLO400 BF

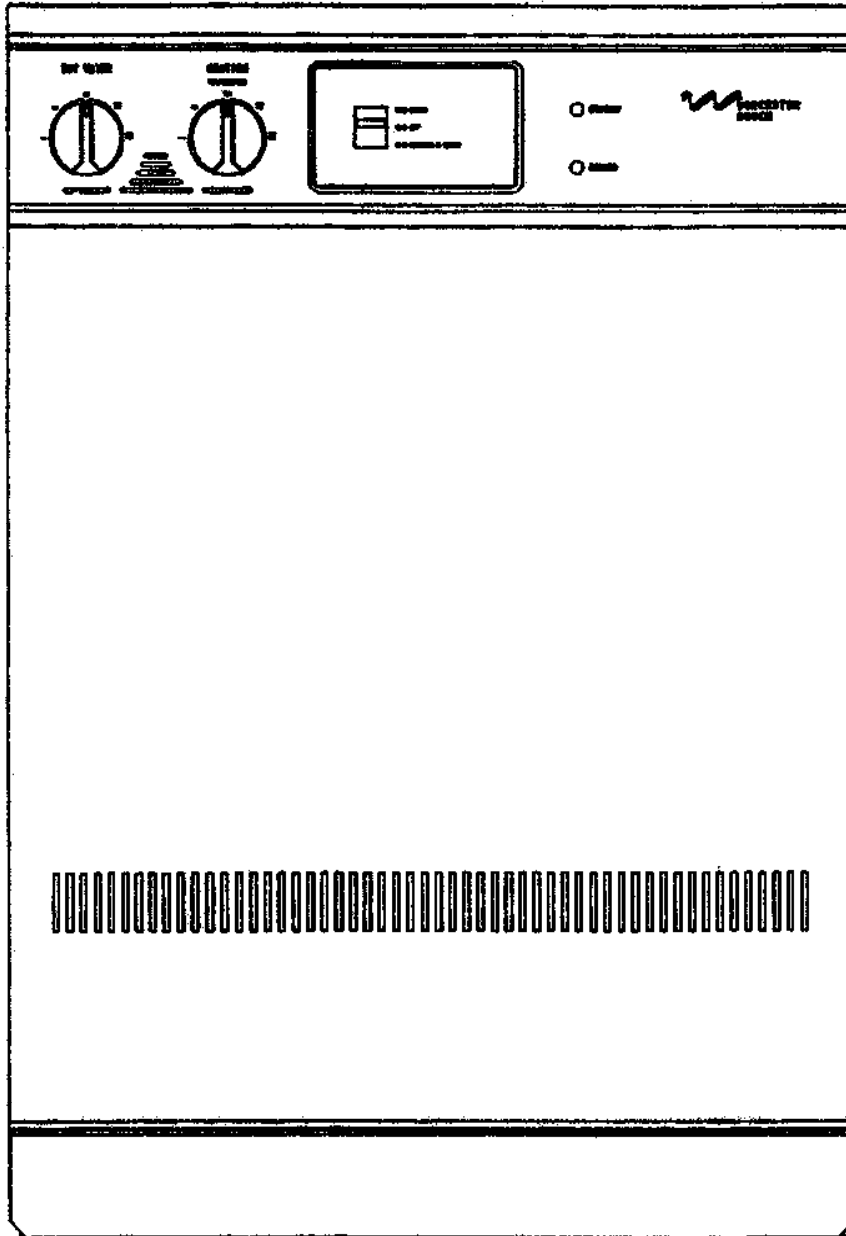

- 1 Casing
- 2 Superstructure & Heat Exchanger
- 3 Pump & Hydraulic Assy (A)
- 4 Pump & Hydraulic Assy (B)
- 5 Tank & Expansion Vessel
- 6 Electrical Box Assy
- 9 Additional Spare Parts

6720900109.AA

Spare parts list

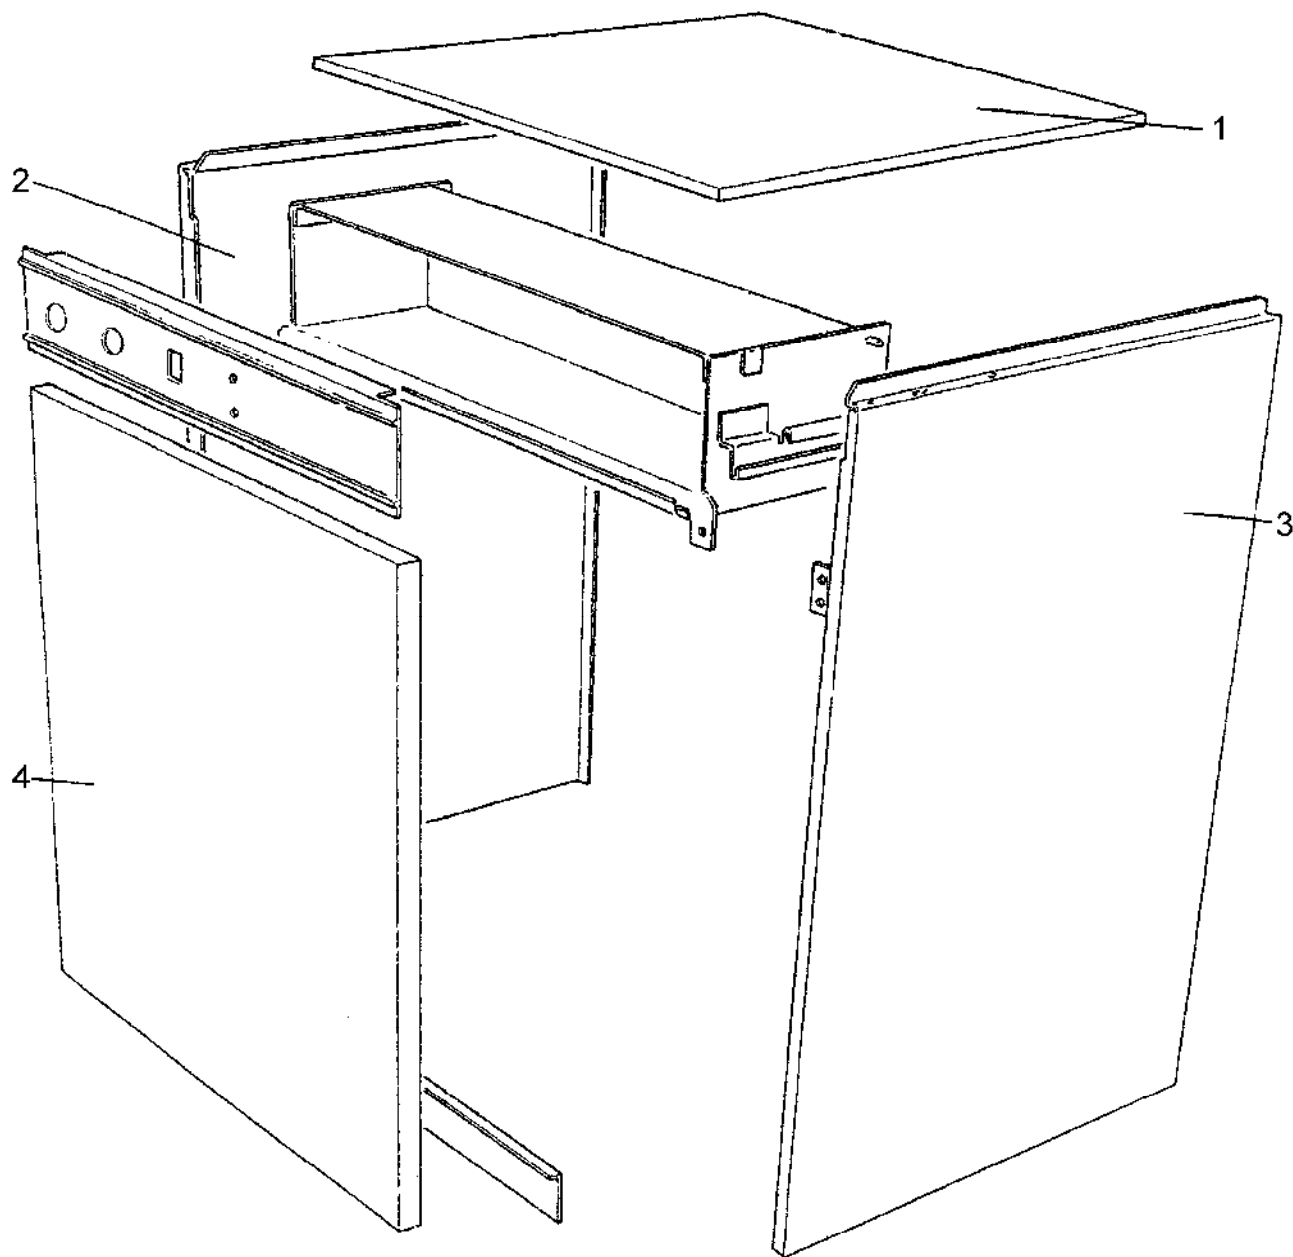


6720900139.AA

Casing
D

1

400 BSN NG 400 BSP LPG

Spare parts list

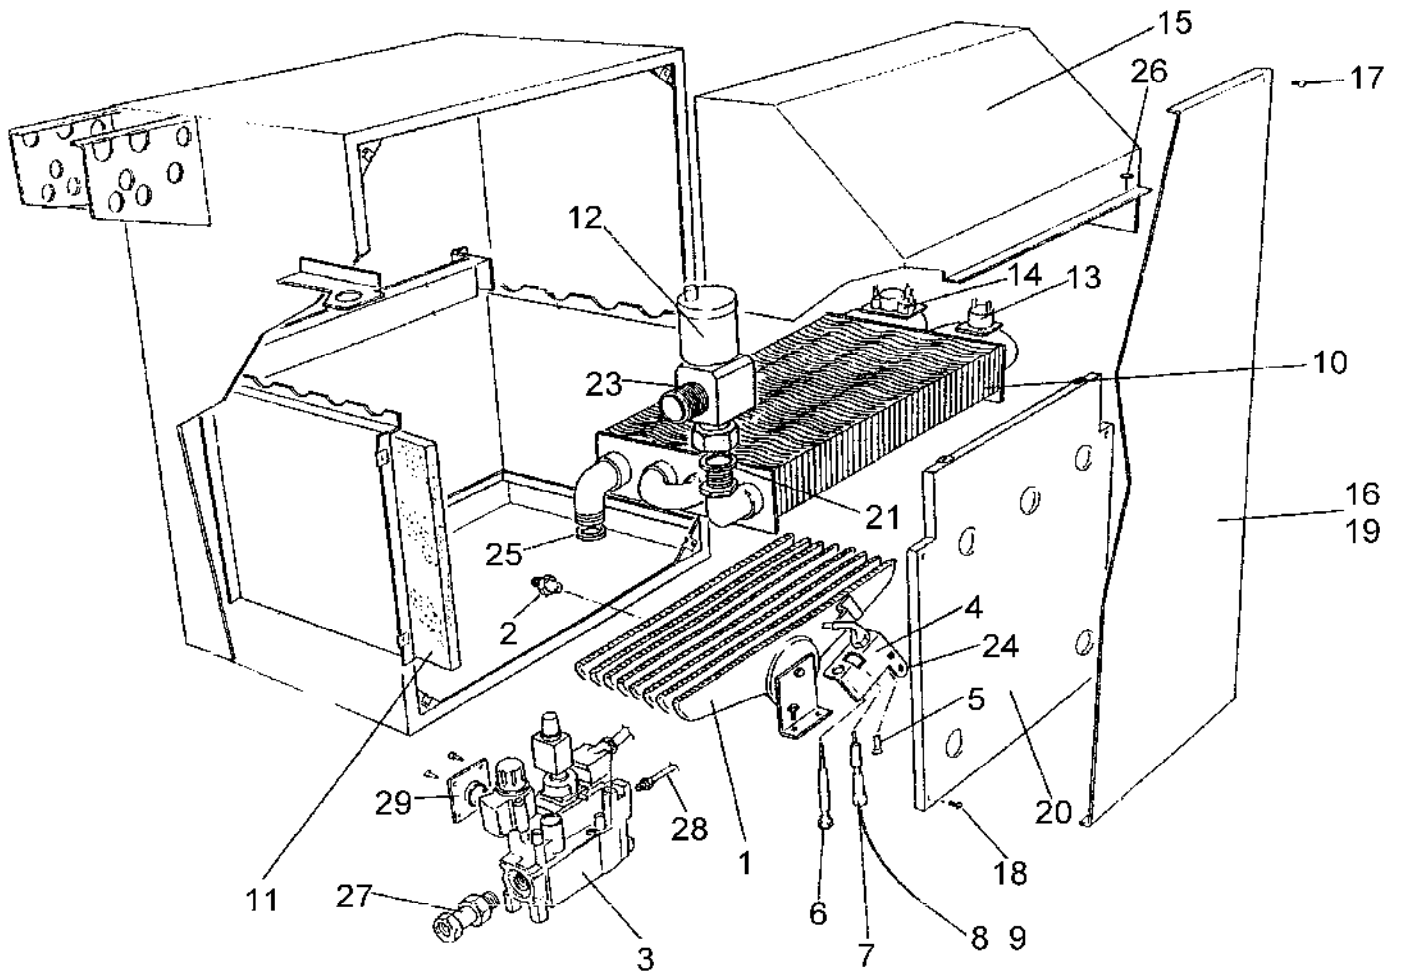


6720900115.AA

Superstructure / Heat exchanger
D

400 BSN NG 400 BSP LPG

2

Spare parts list

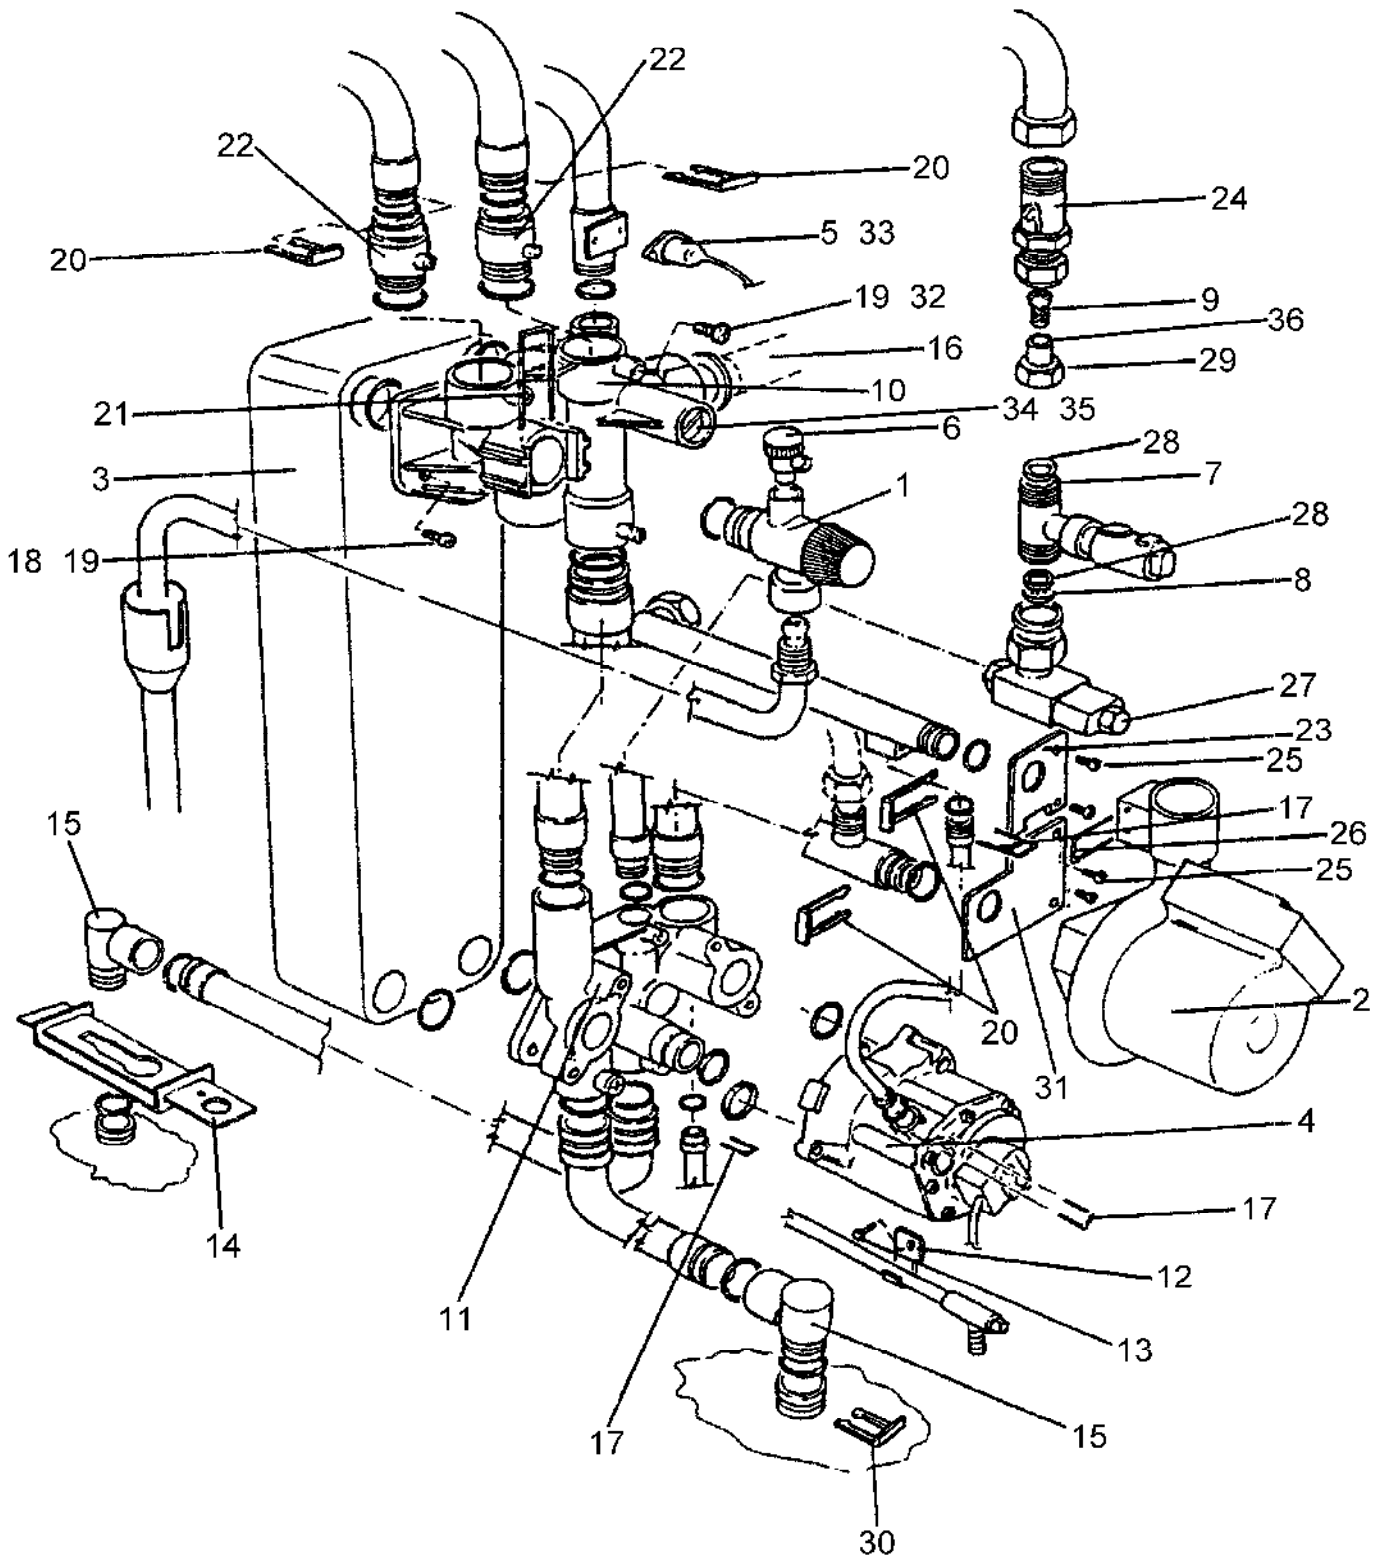


6720900105.AA

Pump / Hydraulic assy (A)
D

400 BSN NG 400 BSP LPG

3

Spare parts list

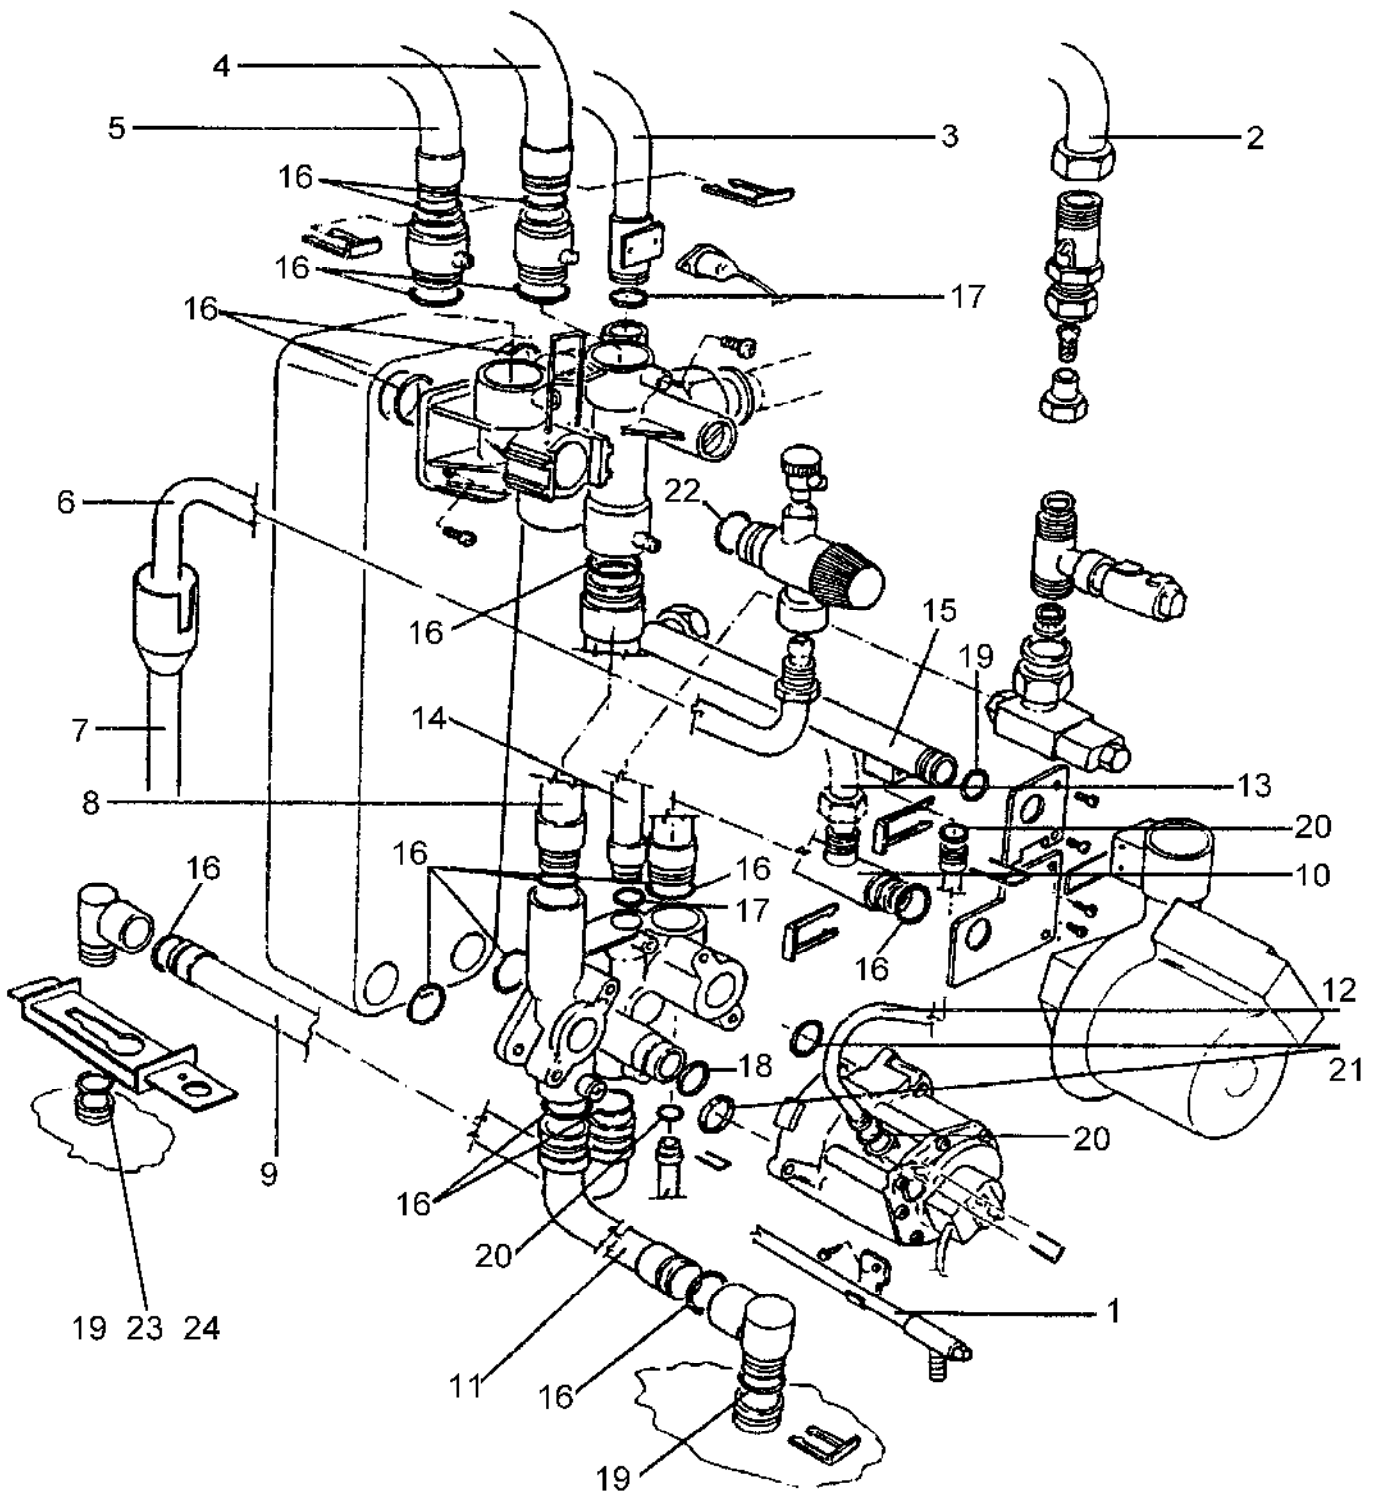


6720900106.AA

Pump / Hydraulic assy (B)
D

400 BSN NG 400 BSP LPG

4

Spare parts list

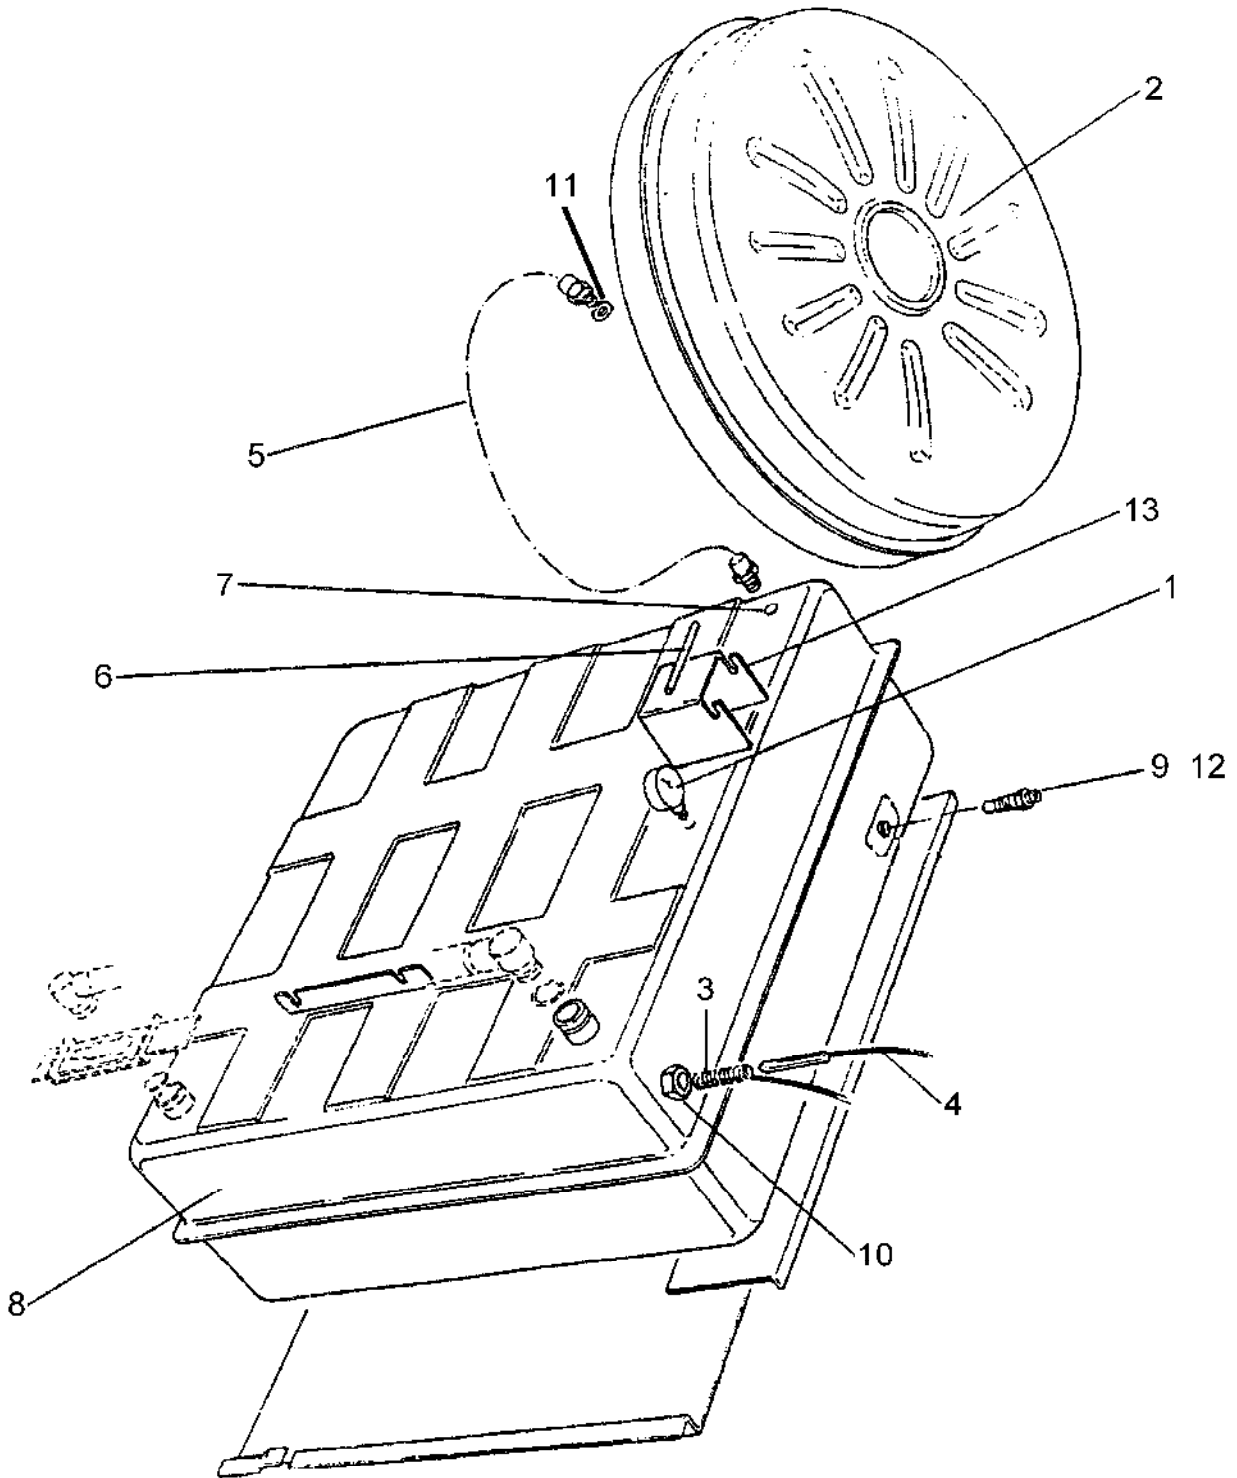


6720900120.AA

Tank & Expansion Vessel
D

400 BSN NG 400 BSP LPG

5

Spare parts list

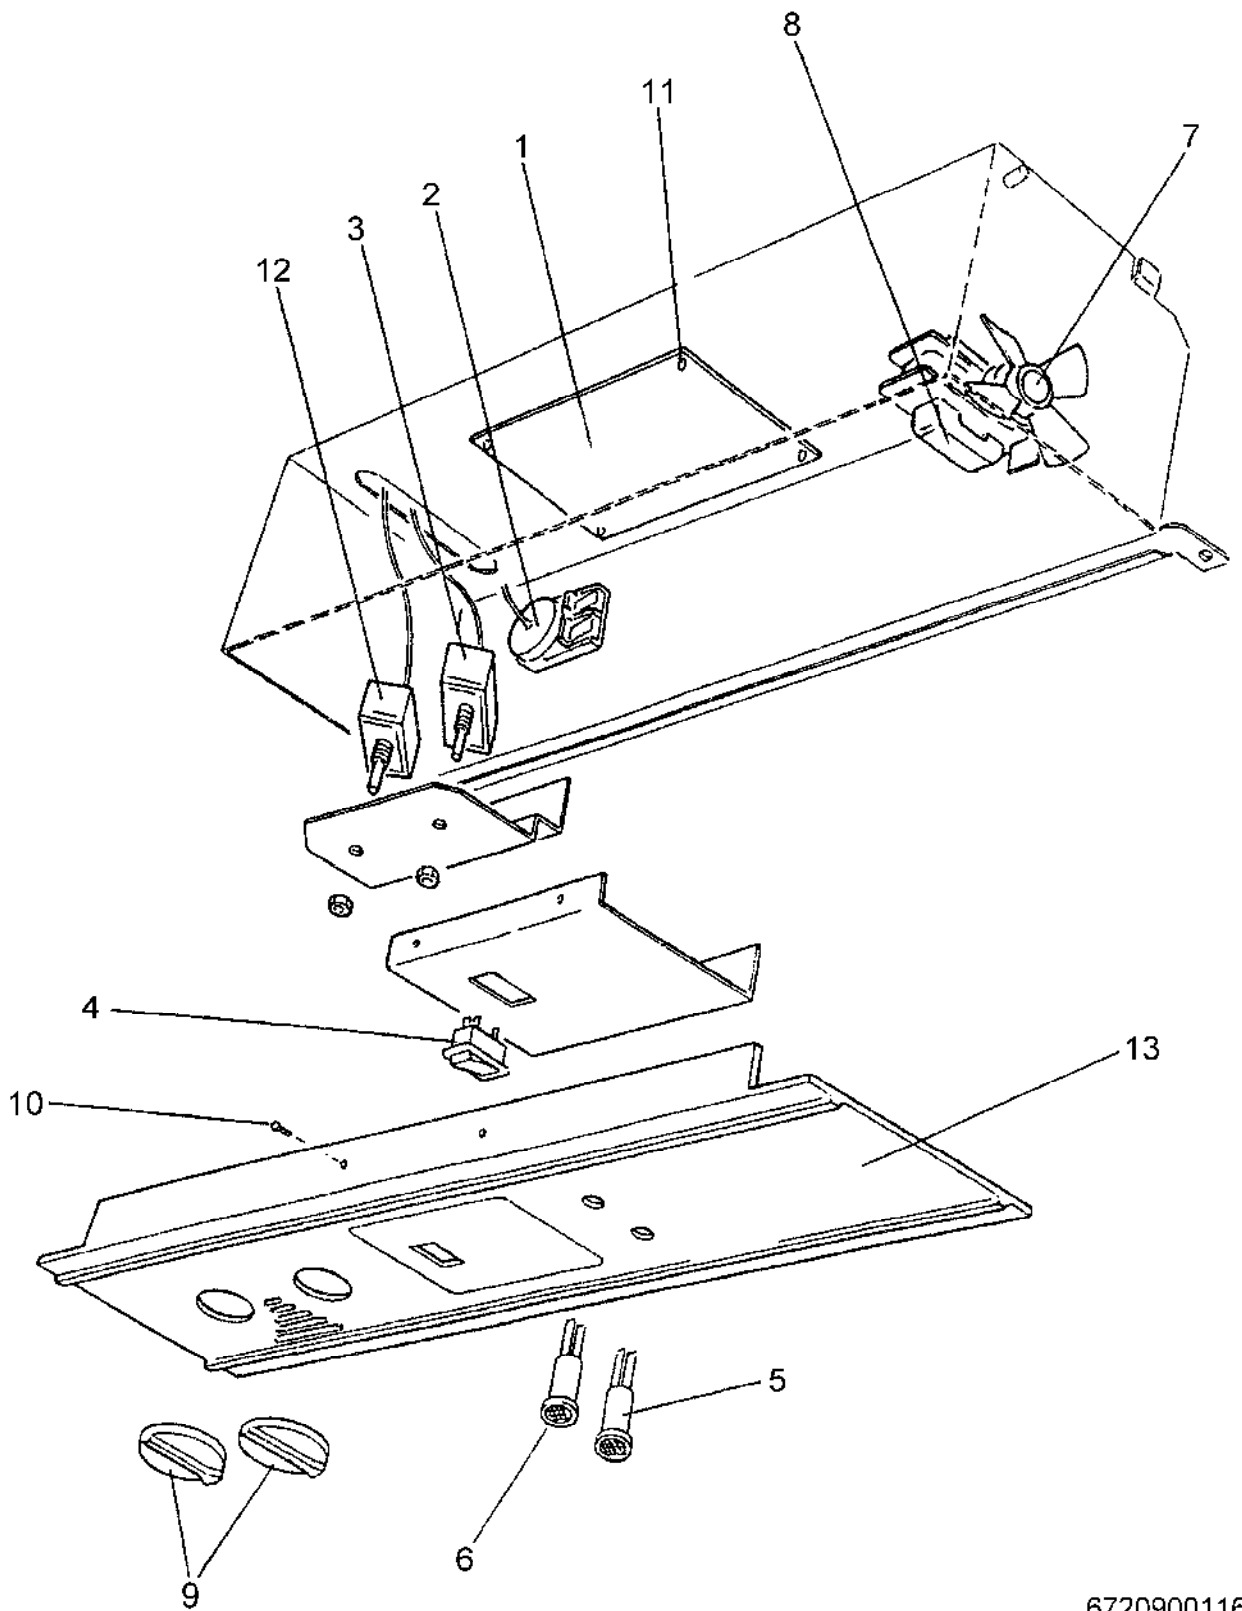

6720900116.AA

Electrical Box Assembly
D

400 BSN NG 400 BSP LPG

6

**ADDITIONAL SPARE PARTS
FOR APPLIANCE
NOT DRAWN**

9099

6720900999.AA

Additional Spare Part
D

9

400 BSN NG 400 BSP LPG

List of translations

Pos			
1			
2			
3			
4			
2			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
23			
24			
25			
26			
27			
28			
29			
3			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
Pos			
12			
13			
14			
15			
16			
17			
18			
19			
20			

List of translations

21				
22				
23				
24				
25				
26				
27				
28				
29				
30				
31				
32				
33				
34				
35				
36				
4				
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
Pos				
5				
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				

